

## A. Engines 615, 616 in model 115.1

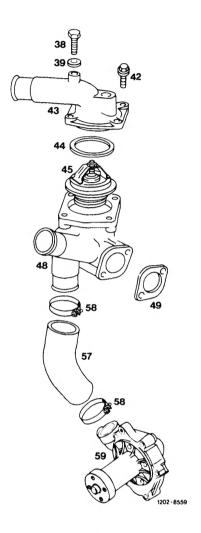

- 38 Screw
  39 Sealing ring
  42 4 combination screws
  43 Thermostat housing cover
  44 Gasket
  45 Thermostat

- 48 Thermostat housing49 Gasket57 Hose58 Clamp59 Water pump with housing


## B. Engines 615, 616 in model 115.1 with air conditioning system

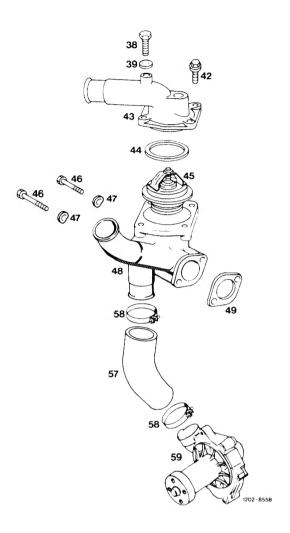

- 38 Screw
  39 Sealing ring
  42 3 combination screws
  43 Thermostat housing cover
  44 Gasket
  45 Thermostat

- 46 Screw
  47 Spring washer
  48 Thermostat housing
  49 Gasket
  57 Hose
  58 Clamp
  59 Water pump with housing


### C. Engine 617 in model 115.1

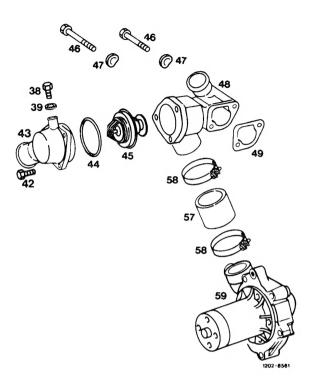

- 38 Screw
  39 Gasket
  42 3 combination screws
  43 Thermostat housing cover
  44 Gasket
  45 Thermostat

- 46 Screw 47 Spring washer 48 Thermostat housing cover 49 Gasket 57 Hose 58 Clamp 59 Water pump with housing


#### D. Engine 617 in model 115.1 with air conditioning system Engines 615, 616 in model 123.1 (1st version) with air conditioning system

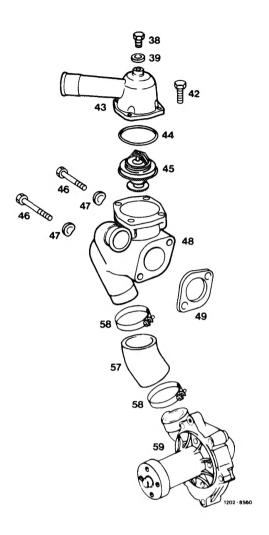

- 38 Screw 39 Sealing ring 42 4 combination screws 43 Thermostat housing cover
- Gasket
- 45 Thermostat

- 46 Screw
  47 Spring washer
  48 Thermostat housing
  49 Gasket
  57 Hose
  58 Clamp
  59 Water pump with housing


# E. Engines 615, 616, 617 in model 123.1 (1st version)

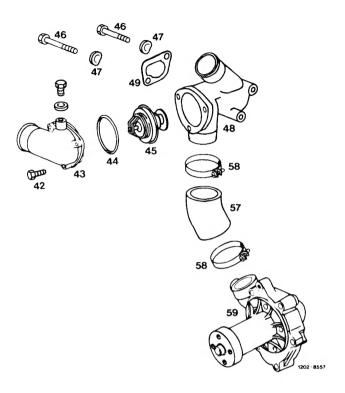

- 42 3 combination screws43 Thermostat housing cover44 Gasket45 Thermostat

- 46 Screw
  47 Spring washer
  48 Thermostat housing
  49 Gasket
  57 Hose
  58 Clamp
  59 Water pump with housing

## F. Engines 615, 616, 617 in model 123.1 (2nd version)

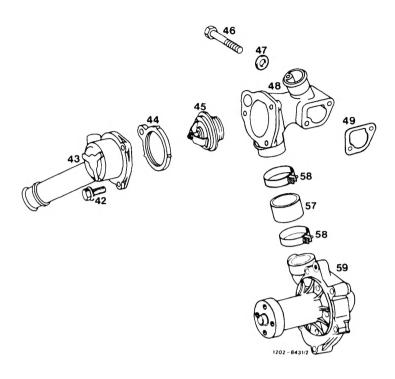

- 42 3 combination screws43 Thermostat housing cover44 Gasket45 Thermostat

- 46 2 screws
  47 2 spring washers
  48 Thermostat housing
  49 Gasket
  57 Hose
  58 Clamp
  59 Water pump with housing